


07744400

DUAL PULLEY STRETCH BELT TOOL

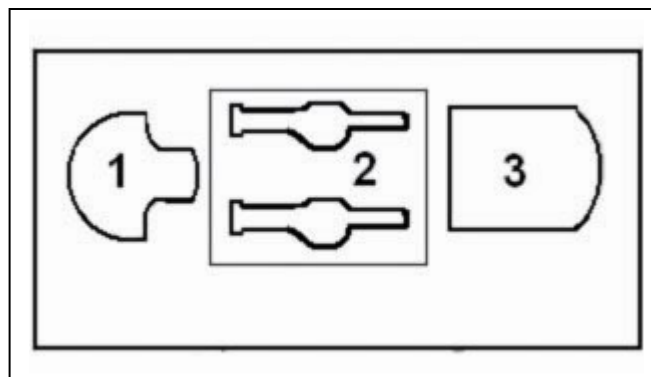

COMPONENTS

1. Tightener d. 50/32 mm
2. Screw & Pin set
3. Elastic Belt Remover



DESCRIPTION

Specially designed tool for mounting and dismounting elastic belts on double pulleys.

BELT DISASSEMBLING

1. Mount the elastic belt remover on the pulley in the part indicated by the arrow in Image A
2. Choose and screw on the remover the supplied screws accordingly to the dimensions of the pulley. The screw must slide into the slot then lock it with the nut and pin.
WARNING: The screw has to lean on the bottom of the pulley.
3. Use the suitable key to turn the pulley anti-clockwise and keep the tightener in its position (Image B)
4. Then rotate the pulley until the complete belt removal (Image C)

BELT ASSEMBLY:

1. Adjust the tightener (No. 1) according to the diameter of the pulley on which you have to work.
2. Lie the tooth of the tightener on the external part of the pulley.
3. Tighten one of the supplied screws (No. 2) on the fitting tool: for the tightener (No. 1) screw the screws into the threaded hole.

WARNING: the screw has to lean on the bottom of the pulley (Im. D)

4. Lay the belt on the lower part of the pulley (Im. E)
5. Insert the tightener making it adhere to the pulley (Im. F)
6. Use the suitable key to turn the pulley and keep the tightener in its position (Im. G)
7. Turn until inserting the belt completely on the pulley (Im. H)

